

1 Razor Tracking X6 Camera

Light Duty Vehicles: Adhere the camera to the center of the windshield directly under the rear view mirror. Adjust camera position to be as vertical as possible.

Heavy Duty Vehicles: Adhere the camera to the center of the windshield in the top 2 inches of the wiper path. Clean the mounting surface with alcohol before mounting. Adjust camera position to be as vertical as possible.

2 Power Box (used to sense vibration)

Adhere the power box to the chassis of the vehicle via double sided tape.

3 Power, Ignition, Ground, Turn Signals


Connect the red wire to constant power source. Connect the orange wire to ignition power source. Connect the black wire to chassis ground.

Optional: Connect the gray wire (sensor input 1) to left turn signal (+).

Optional: Connect the green/yellow wire (sensor input 2) to right turn signal (+).

4 Video Out Cable



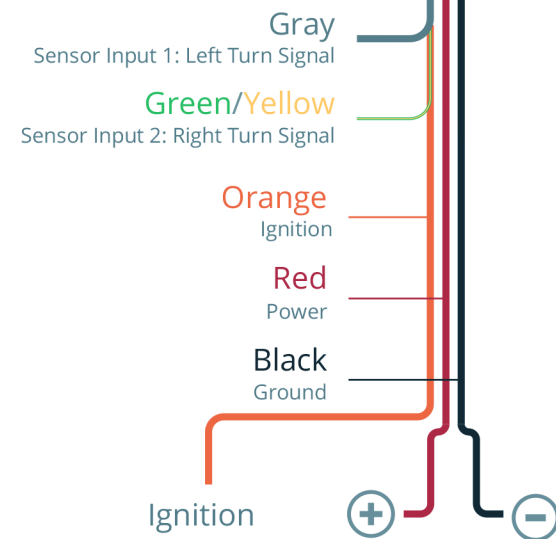



For LCD and camera add-ons.



Razor Tracking Hardwired

razortracking.com
support@razortracking.com
(833) GORAZOR Option 2

Razor Tracking LED Indicators

LED	Name	Description	Icon
1	Power	Green On after unit is powered on	
2	Alarm	Default Off Flashes Red 3 times after any event is triggered	
3	GPS	Default Off — GPS Normal Red On — GPS acquiring signal	
4	Server Connectivity	Default Off — Connected Red On — Trying to connect to the server	
5	Wi-Fi	Default Off — WiFi either in client mode or not being used RED ON — Wi-Fi in AP mode or configuration mode	
6	External Cam	OFF — External camera is recording (if present). RED ON — External camera is malfunctioning	



Razor Tracking Hardwired

razortracking.com
support@razortracking.com
(833) GORAZOR Option 2